

Escape™
P6 BT

Quick Start Guide


escape™
a journey through sound

Carefully read all safety precautions in the attached document or on the website
www.escapespeakers.com before using this product.

P6 BT QSG ENG-SP (V2021.01)

Enjoy your Escape™ P6 BT in 3 steps

1 CHARGING THE INTERNAL BATTERY

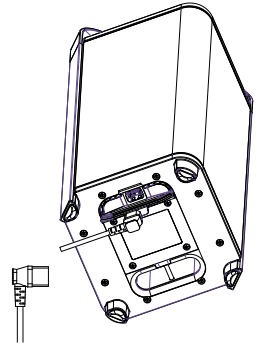

- Connect the enclosed power cord to the input of the device (at the bottom of the unit).
- Plug the power cord into an electrical outlet.
- The red power LED [] on the keyboard will light up to indicate that the battery is charging. Leave the unit connected to the mains until the red LED goes out. The battery is then fully charged.
- Remove the power cord and close the protective cover.
- A full charge cycle of the battery takes approximately two to three hours. Never leave the P6 BT unattended while charging.

2 TURNING ON THE UNIT



Press the power button [] for a few seconds until the LED of the volume up button [] lights up briefly.

A few seconds later, all LEDs will light up and a short confirmation tone will indicate that the unit is switched on.


3 STREAM MUSIC TO THE ESCAPE™ P6 BT WITH BLUETOOTH® WIRELESS TECHNOLOGY.

- To start the Bluetooth® connection, briefly press the Bluetooth® button []. The white LED will start flashing blue and white followed by a double confirmation tone.
- Go to Settings [] on your Apple® or Android™ device, select Bluetooth® from the connection list and turn on Bluetooth®.
- Select Escape™ P6 BT xxxx from the device list. The xxxx represents the last 4 letter/number combination of the unique serial number of the unit. You can find the full serial number on the label next to the battery compartment on the bottom of the unit or on the packaging. (4 last digits are printed in bold)
- Do not** select the Escape™ P6BT xxxx App from your list of devices if listed. You cannot stream music via this link.
- The blue LED of the Bluetooth® symbol on the Escape™ P6 BT keyboard will light up permanently as soon as the connection is established, followed by a short confirmation tone. Play your favorite music on the connected mobile device.

Note: If the Bluetooth® connection failed and your mobile device asks you to forget the device, P6 BT may not reappear in the list. In that case, turn Bluetooth® off on your mobile device and turn it on again. P6 BT will then be listed again.

IDEAL LISTENING POSITION

- The P6 BT's specially developed DSP is set to "wide" mode for a three-dimensional sound reproduction.
- Turn the speaker slightly towards the listening position for optimal soundstage. This allows the listener to hear the location of different instruments when listening to a particular piece of music.
- The "wide" mode can be changed to "Stereo" if desired via the Escape™ Remote app.

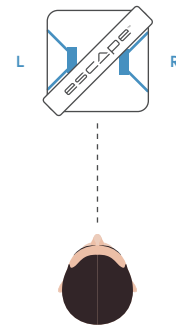

How can I play music on the Escape™ P6 BT from my mobile device?

There are hundreds of free and paying music apps that can be downloaded to your mobile device. (*)

Depending on whether you have an iOS (Apple) or Android operating system, you need to download the app from the Apple store or Google Play.



Spotify is now free on mobile and tablet. With Spotify you have access to a world full of music and podcasts. Registration required.



Radioplayer is the official radio app for the United Kingdom, supported by the BBC and all major independent broadcasters. It's easy to use, with a number of powerful features that will help you enjoy the radio even more. The 11 countries where Radioplayer is active are: UK, Germany, Italy, Canada, Ireland, Austria, Norway, Belgium, Switzerland, Peru, Denmark.



TuneIn brings you live sports, music, news, podcasts and internet radio from all over the world.



Receiver radio (One-time) to be purchased. Receiver is an international internet radio that includes more than 40,000 radio stations, more than 25,000 podcasts and a radio alarm clock function. Search by genre, region, language, sound quality, popularity, etc.
+ List of channels with high sound quality

(*) Certain music services are subject to change, require individual subscriptions, software or memberships, or may not be available in all countries. Escape™ bv cannot be held responsible for this.

Ultimate Stream
Elstead, Surrey, GU8 6DG

T 07423 603035
E steve@ultimate-stream.co.uk

Discover our products online:
outdoor.ultimate-stream.co.uk

Overview functions of control buttons

BUTTON	FUNCTION
 On/Off button	Turn the Escape™ P6 BT on and off. To turn on the P6 BT, press the power button for 2 seconds until the LED of the volume up button [] lights up briefly. Briefly press the power button to turn off the P6 BT.
 Skip backwards	Press the skip backwards button [] to replay the song from the beginning or press it twice in quick succession to go back to the previous song.
 Play/pause	Start or pause the music.
 Skip forward	Play the next song.
 Decrease the volume	Press the [] briefly to decrease the volume step by step. To decrease the volume quickly, press and hold the [].
 Increase volume	Press the [] briefly to increase the volume step by step. To increase the volume quickly, press and hold the [].
 Bluetooth® pairing	Briefly press the Bluetooth® logo [] to start pairing with your device. The white LED starts flashing blue and white followed by a double confirmation tone. The search function is activated for 8 minutes and a confirmation tone is heard every 2 minutes. After 8 minutes, the search function stops automatically. Briefly press the Bluetooth® symbol again to restart the search function if necessary. When your portable device is connected in Bluetooth™ with the P6 BT, a short confirmation tone is heard and the Bluetooth® LED lights up permanently blue. The last 8 devices paired in Bluetooth® with the P6 BT are stored in memory. There is no need to pair every time the P6 BT has been turned off. The P6 BT automatically establishes a connection If your portable device is stored in the P6 BT Bluetooth® memory. As soon as you have established a connection with more than 8 devices and the P6 BT, the oldest device is automatically removed.

Keypad special functions

BUTTON	FUNCTION
 5 sec Keypad lock	Press the skip backwards button for 5 seconds until you hear a confirmation tone. The keypad is now locked. To confirm, the skip backwards LED starts flashing three times each time you touch any key.
 5 sec Keypad unlock	Press the skip forward button for 5 seconds until you hear a confirmation tone. The keyboard is now unlocked.
 10 sec Factory reset	Press and hold the play/pause button for 10 seconds until you hear a double confirmation tone. The factory settings will be restored. All Bluetooth® devices are deleted from the P6 BT Bluetooth® memory and Twin mode is switched off.
Standby mode	The standby mode is activated by default. This means that when the unit is turned on and does not receive any audio signal for 20 minutes, the P6 BT enters standby mode to save power. The power button will blink and all other LEDs will turn off. Press the power button to turn on the P6 BT again.




Escape™ Remote App

Download the customized "Escape™ Remote" App and use your phone or tablet as a remote control to control your P6 BT. Make sure your Escape™ is always up to date with the latest software via over-the-air updates.

The user manual for the app can be downloaded from the Escape™ website.



TWIN mode

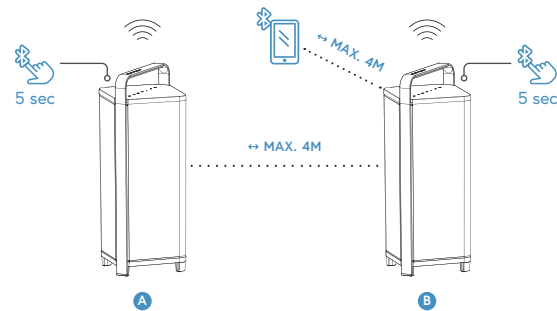

TWIN MODE SET UP

It is possible to connect two Escape™ P6 BT via Twin mode. Make sure that the distance between the two speakers and the Bluetooth® audio source is no more than 4 meters.

Range may vary depending on the brand and model of the phone, tablet or laptop. Note: To enhance the Bluetooth® signal in Twin mode, point the antennas of the two P6 BT towards each other . The direction of the antenna is indicated at the bottom of the device by an arrow .

Turn on unit A and unit B. Make sure that one P6 BT is connected in Bluetooth® to your mobile device (see Bluetooth® pairing). Then press the Bluetooth® symbol on unit A and B for 5 seconds. All LEDs except the on/off and Bluetooth® LED start flashing and you hear a short confirmation tone followed by a long confirmation tone when both units are connected. Twin mode is stored in the memory and both units will automatically reconnect after the units have been switched off and on again.

  White LED's flashing simultaneously = P6 BT's in Twin search mode
 White LED's flash one by one = Twin mode active

TWIN MODE TEMPORARILY DISABLED

If you briefly press the volume down [] and volume up [] symbols at the same time, the Twin mode is temporarily switched off. Both P6 BT's work as individual speakers. When the speakers are switched off and on again, the Twin mode is activated again.

For more information, download the extended user manual from the website www.escapespeakers.com

The power LED light indicates the status of the internal battery.

LED APPEARANCE	BATTERY STATUS
Flashing red for 3 seconds and white for 0.5 seconds	The battery charge has reached approximately 10%. The unit is not connected to a power outlet and the battery needs to be charged.
Solid Red	The unit is connected to a power outlet and is charging.
White	The battery is fully charged.
Rapidly flashing red for 10 seconds	Battery error, for example when the power cable is connected to a power outlet but no battery has been installed.

Warranty and regulations

Limited warranty for the product

The product is covered by a 1-year limited warranty (*) in accordance with the Escape™ P6BT User Manual. The warranty includes all parts and labour required to repair the product. This warranty does not cover damage caused by misuse, accident, misuse, negligence or improper operation or installation, products that have been altered or products whose identification number or serial number has been altered, defaced or removed. For this warranty to apply, you must use the product in accordance with the instructions. (*) The limited warranty on Escape™ products is not subject to change but is subject to alternative legal regulations that may vary from country to country.

Battery Warranty Limitation

The battery is guaranteed for 6 months from date of purchase worldwide.

Returning a P6 BT for repair

Repack the speaker in its original packaging or in a corrugated carton with at least 7.5 cm of resilient material to protect it from damage in transit. Escape™ bv is not responsible for any damage in transit.

European Union

Escape™ bv hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53 / EU and all other applicable EU Directives.



EU WEEE



The IPX4 rating of a product means it is suitable for all weather conditions and can withstand strong water splashes. However, it is not resistant to immersion.

In accordance with the European WEEE Directive (Waste Electrical and Electronic Equipment), effective 13 August 2005, we would like to notify you that this product may contain regulated materials which, according to the WEEE Directive, require special re-use and recycling processing. When disposing of packaging and other related shipping materials, we encourage you to recycle these items through the normal channels. The Escape™ P6 BT battery complies with UN38.3 regulations.